

RECKLI 2/168 SOMME

A vertically running wood pattern. The uneven surface of the sticks is reminiscent of broken and splintered wooden beams.


Concrete Pattern by André Berthier & Joseph Frassanito.

DIMENSIONS

Uses	Dimensions (mm)	Order Number
100	▲ 7900 x ▶ 1270	C 2168
50	▲ 7500 x ▶ 1000	F 2168
10	▲ 7500 x ▶ 1000	T 2168

100-timer formliners are supplied in an individual dimension within the maximum indicated dimensions.

The specified widths of the 10-timer and 50-timer formliners are a fixed dimension and ensure the continuity of the structure in the case of linear patterns. The longitudinal direction of the pattern is variable and can be ordered from 1 m up to the maximum dimension in 50 cm steps.

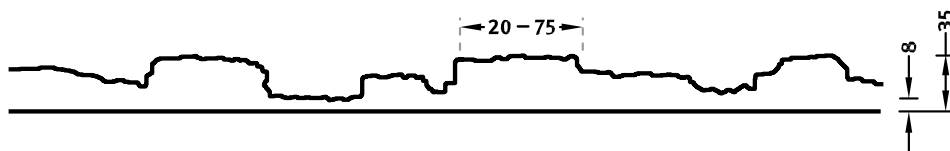

REFERENCES

